

Instructions for
building

PENT SHED

Tools and fixings

35 4mm x 70mm Screws

70 10mm Felt tacks

4 Roof nails

40 2.1mm x 45mm Nails

Spirit level

Cordless Screwdriver with PH2 or PZ2 bit

Hammer

Stanley knife

Fitting windows

If you have a window to fit you should have the following:

- 1 Pane of glass already cut to correct size
- 1 Tube of clear silicon sealer (not supplied)
- 4 Window beading pieces
- 12 Beading tacks

Make sure the glass is clean and dry.


Using a mastic gun apply a continuous line of sealant to the inside of the window recess, making sure there's no gaps in the sealant.

Fit the glass in and gently press evenly all way round to make a good seal.

When fitting the beading make sure you put the two longer pieces in first at opposite sides (tack each piece down as you go) then fit the shorter pieces in at the top and bottom.



But the base down making sure
it's level and sturdy

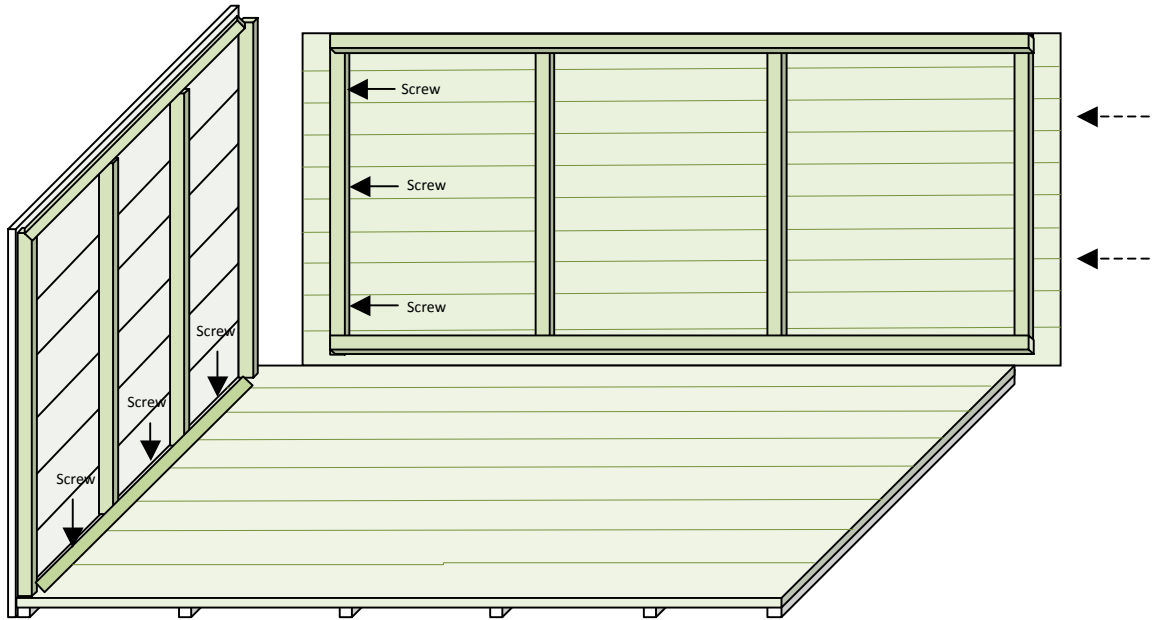


Stand the side panel with the 20mm overhang at bottom & flush with front of base.


Making sure the high end is at the front.

Stand the back panel on the base & slide to the corner to engage the supports.


Screw with 4mm x 70mm making sure the screws go through base supports.


Fit the opposite side panel in the same way and fix with 4mm x 70 mm screws.

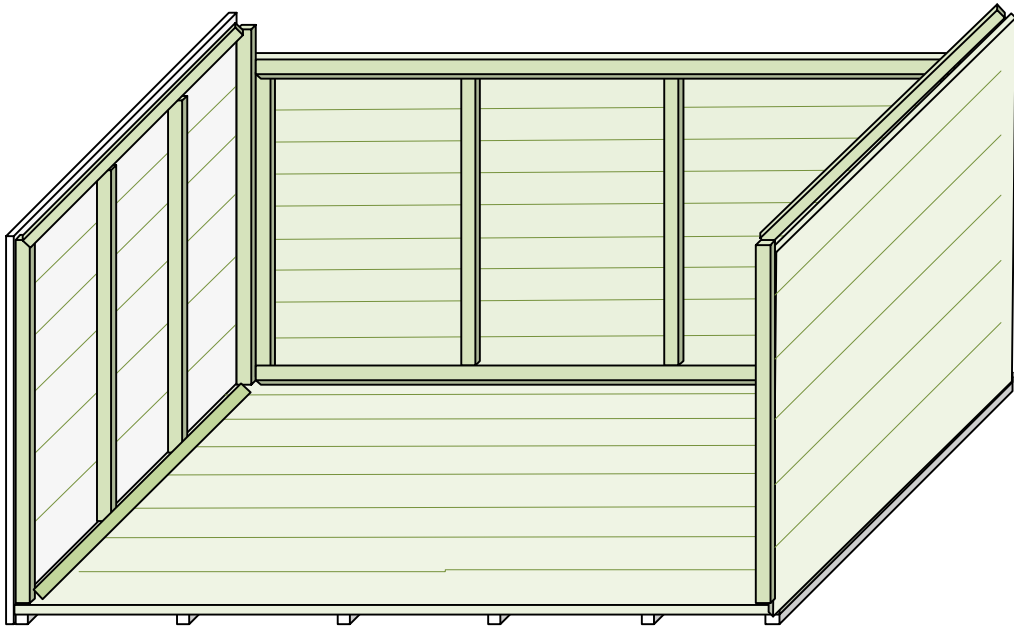

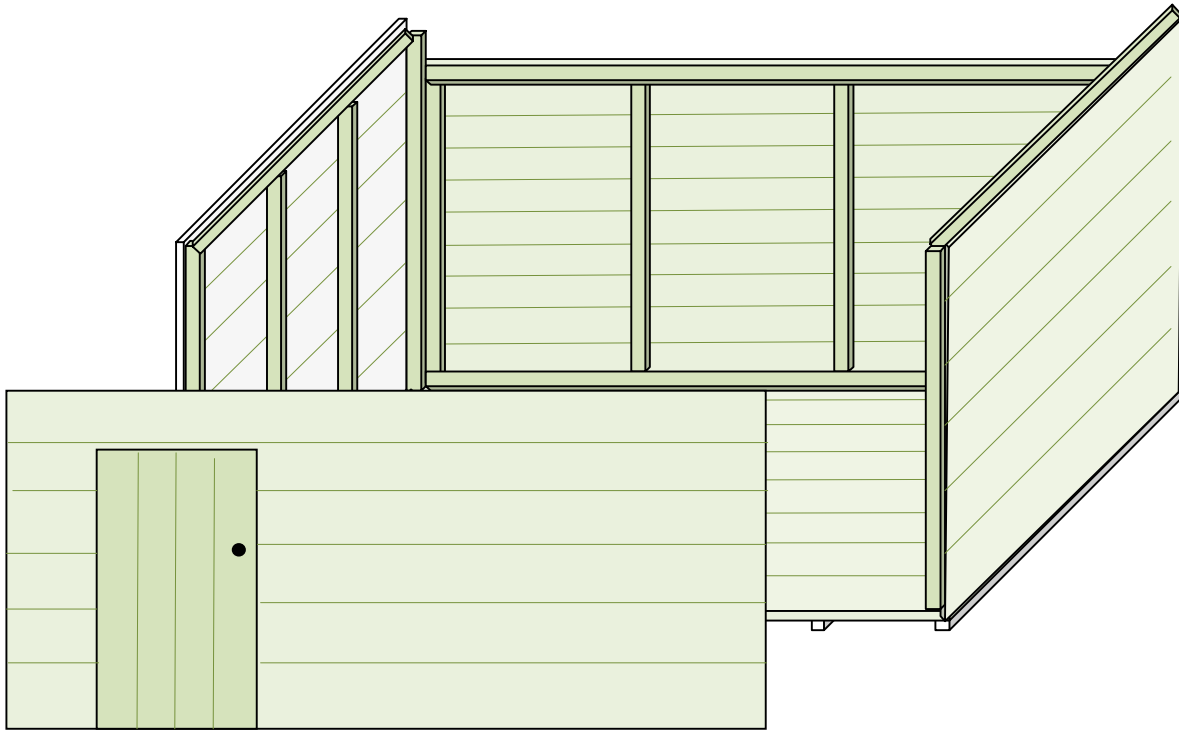

Fit the front panel and fix with 4mm x 70mm screws (same as sides & back)

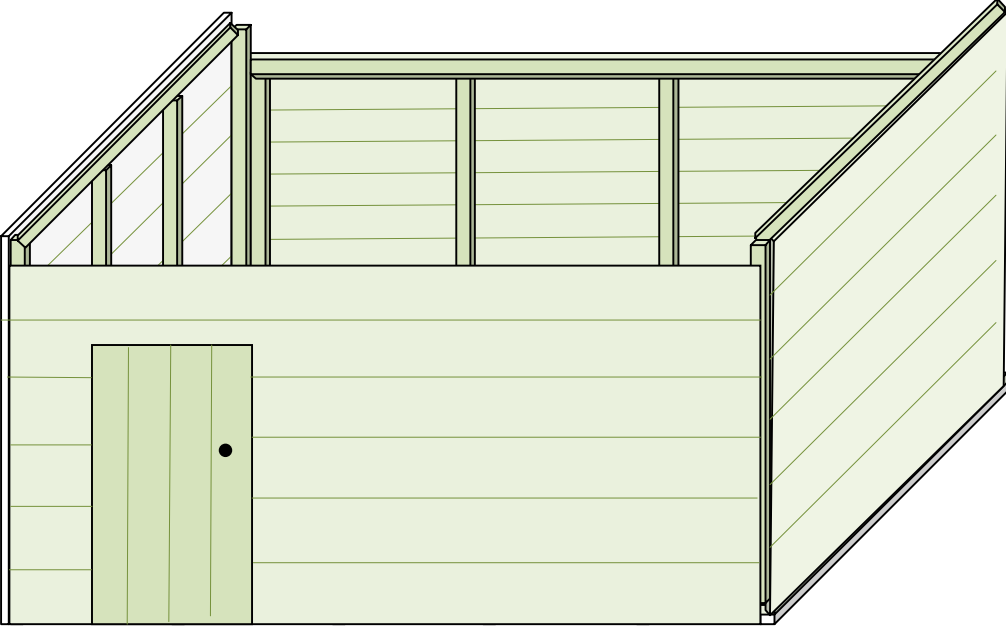

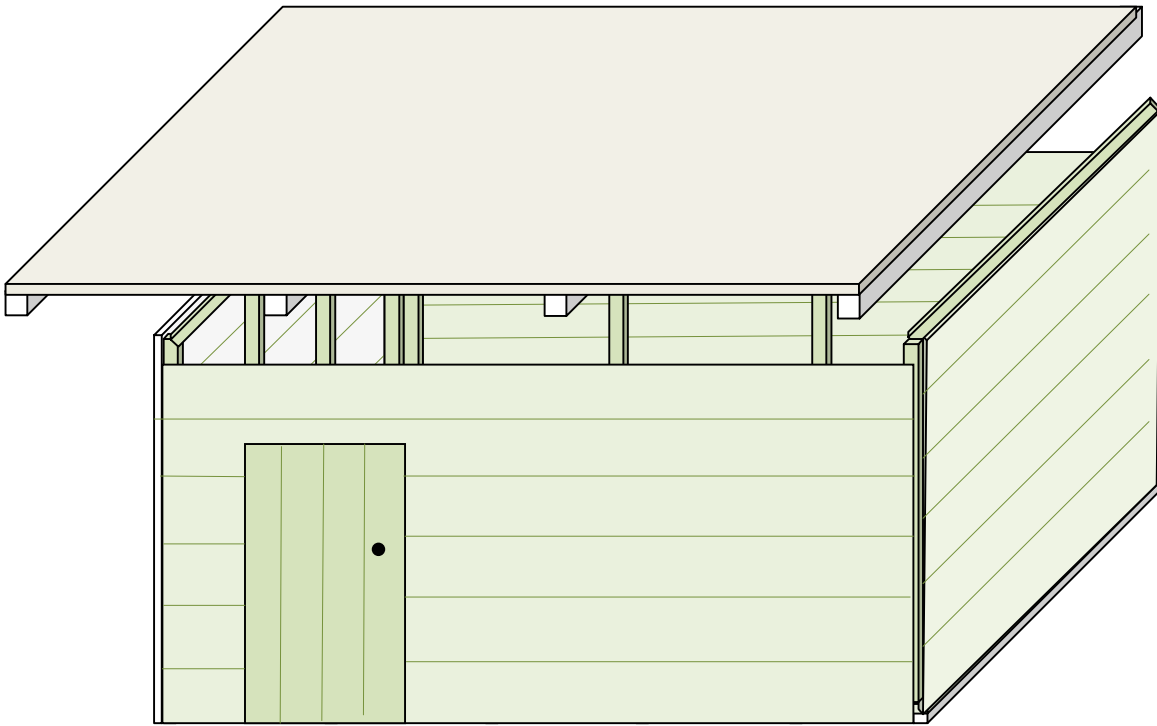


Fit the roof panel, making sure there's an equal overhang at front and back.

Screw from inside up in to the roof supports on front and back panels..

Also screw down through the roof at the 4 corners into the side panels

Use 4mm x 70mm screws.

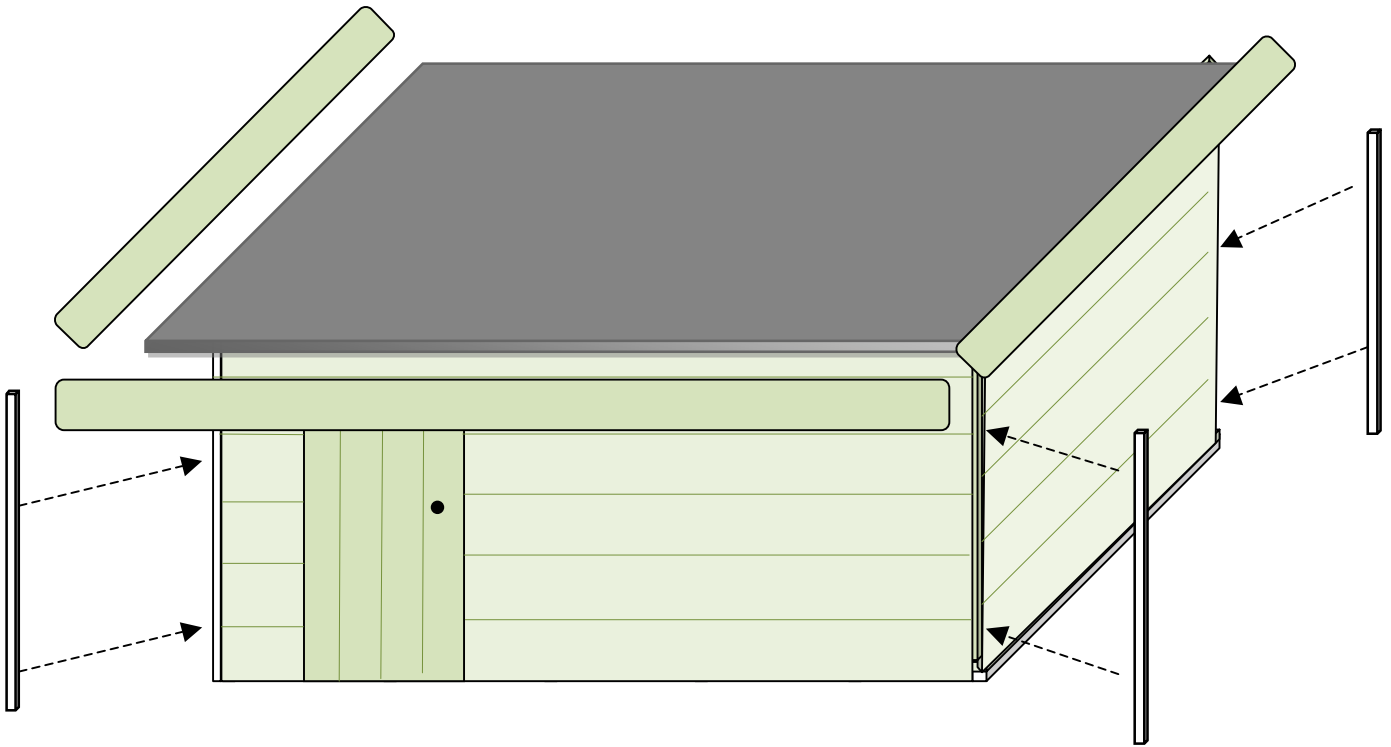

Once the roof is attached proceed to felt, starting at the lowest end and working up to the highest end. Make sure the felt pieces overlap each other at least 6" and overlap the edges 2"

Nail on the 2 side facia boards.
Nail on the front facia board.
Nail on each corner strip

