

# **SINGLE WHEELIE BIN STORE ASSEMBLY INSTRUCTIONS**



**2 PERSON ASSEMBLY**

# CONTENTS

## SCREWS

LARGE X 4  
MEDIUM X 6  
SMALL X 19


## LID X 1



## SIDE 1 X LEFT 1 X RIGHT



## PADBOLT X 1

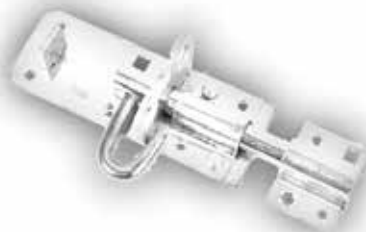

## BASE BAR X 1



## TOP BAR X 1



## DOOR X 1




## BACK X 1




**Step 1 :**

**Attach left side to the back from the inside with 3 medium screws.**

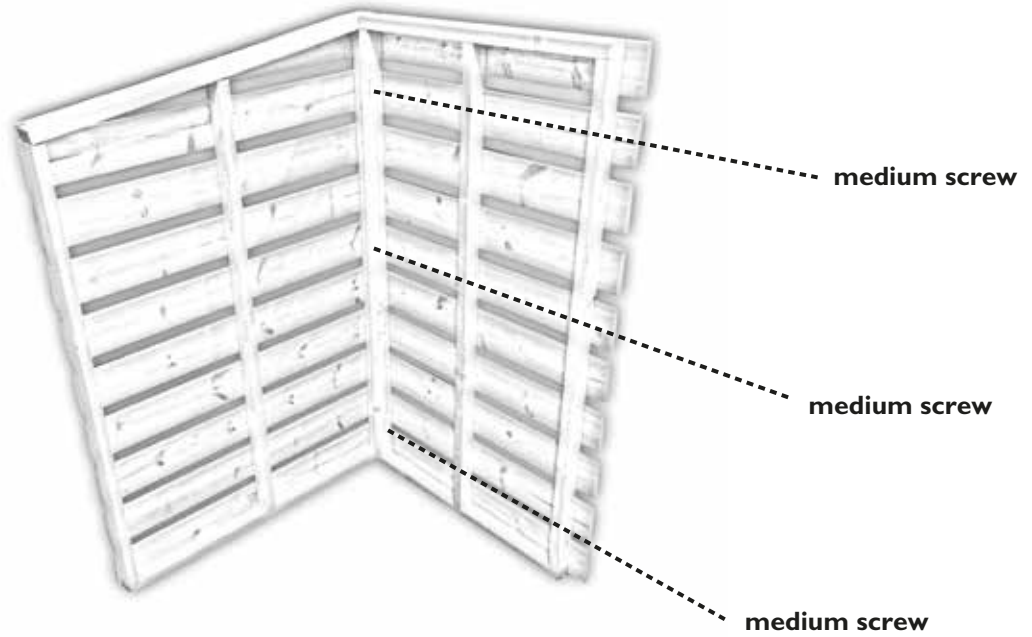


**Step 2 :**

**Attach right side to the back from the inside with 3 medium screws. Then attach the top bar and bottom bar with 4 large screws.**

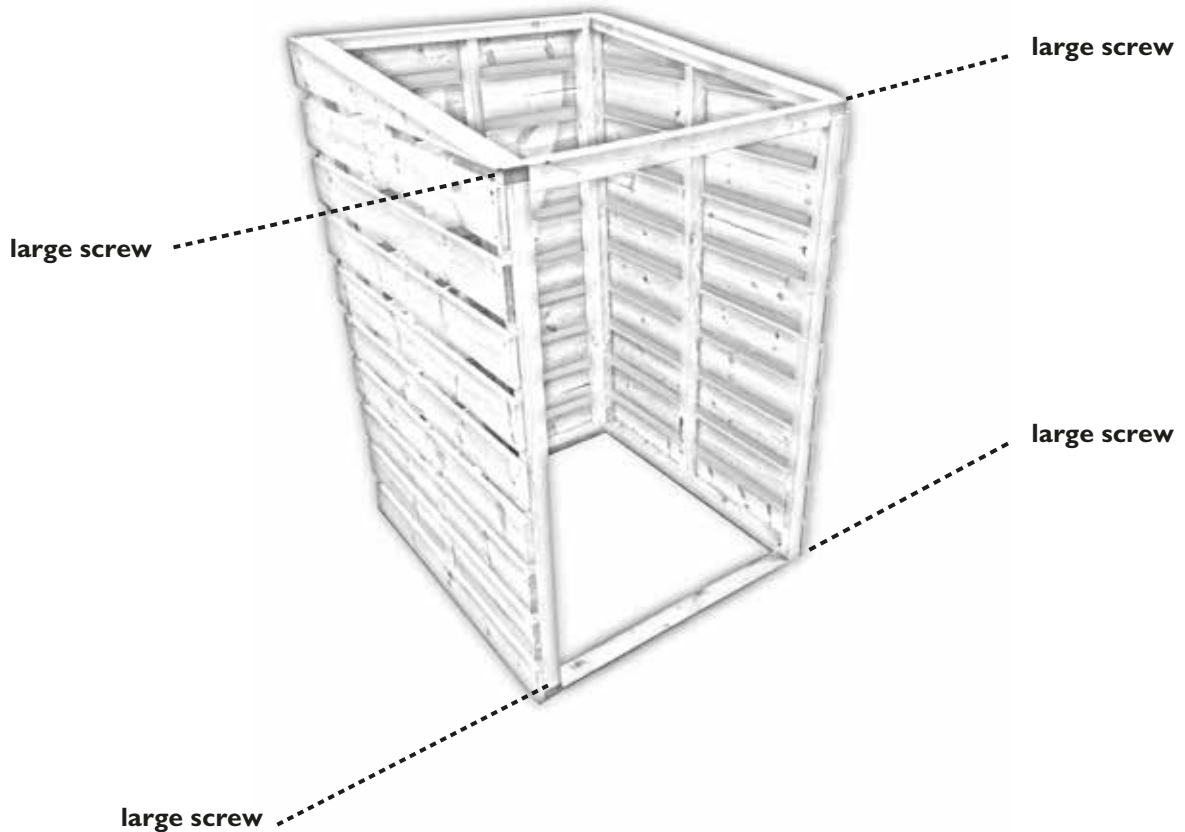


**Step 3 :**

**Attach the lid to the top edge of the back with 6 small screws. Align hinge flush with back.**

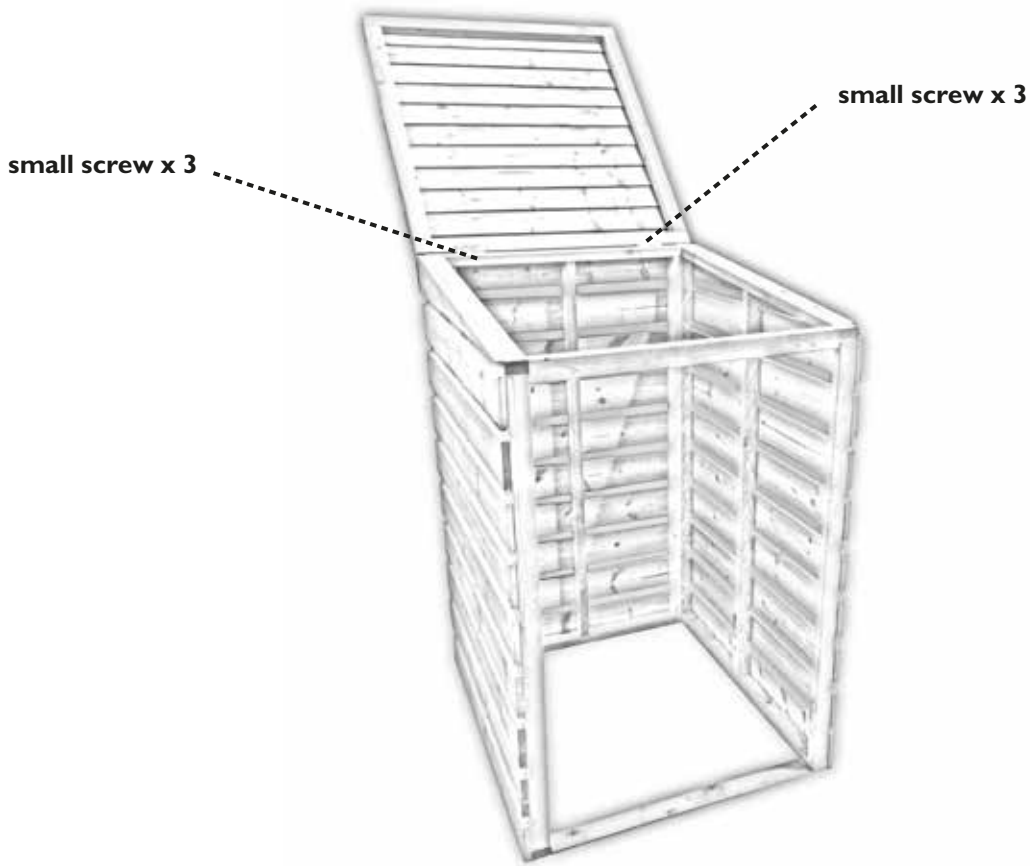


**Step 4 :**

**Attach door to right side frame inside with 6 small screws. Align hinge with front edge and door into opening leaving equal gap top and bottom.**

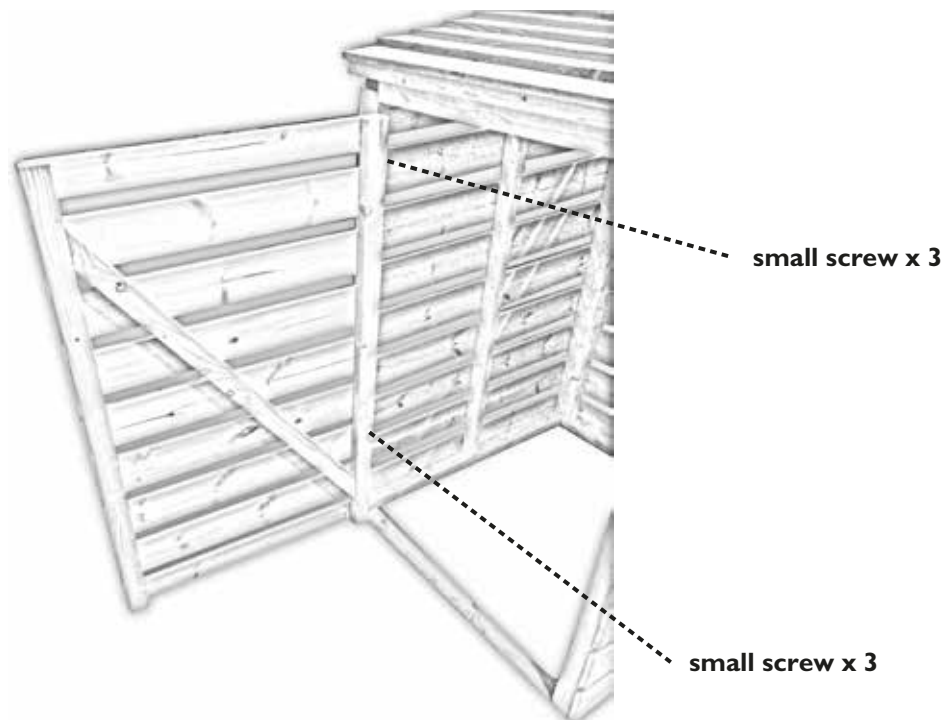

**Step 5 :**

**Attach the chain to the inside of the lid with a small screw. Attach the chain to your bin handle so the bin lid lifts with the bin store lid.**

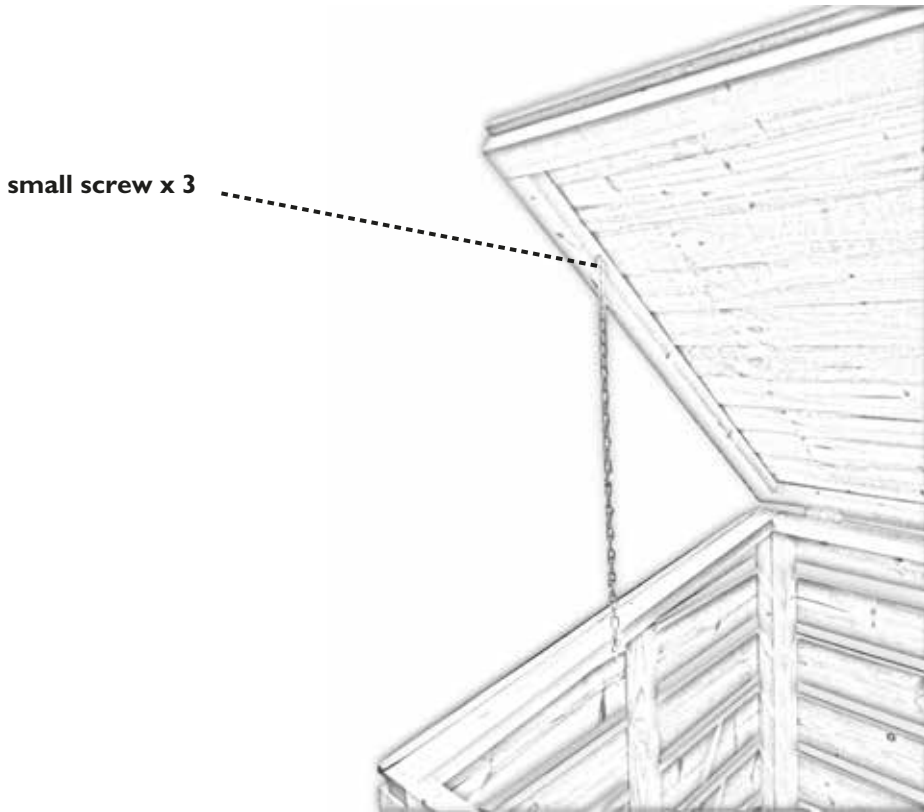

**Step 6 :**

**Attach the padbolt to the door with small screws and the catch to the frame also with small screws.**

