

DOUBLE WHEELIE BIN STORE ASSEMBLY INSTRUCTIONS



2 PERSON ASSEMBLY

CONTENTS

SCREWS

LARGE X 8
MEDIUM X 18
SMALL X 37

LID X 2



DOOR X 2




SIDE 1 X LEFT 1 X RIGHT



BACK X 2



BLANK X 2

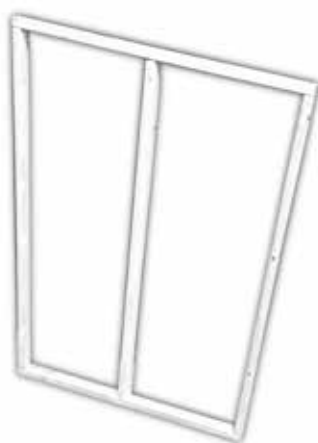

PADBOLT X 2



BASE BAR X 2




TOP BAR X 2




Step 1 :

Attach left side to the back from the inside with 3 medium screws.

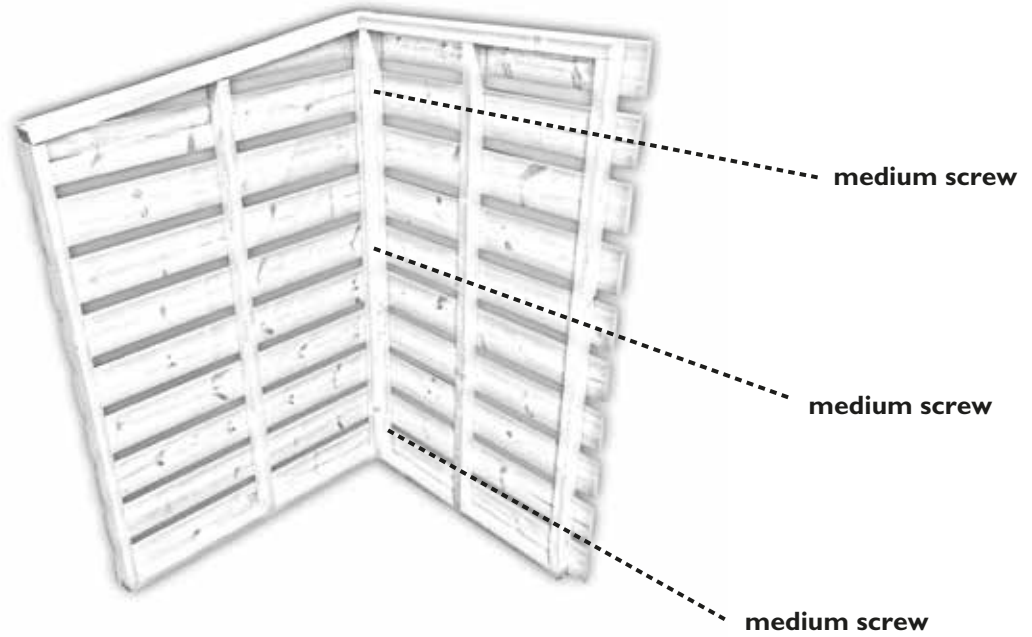

Step 2 :

Attach the with no pilot holes blank to the back using 3 medium screws and the top and bottom bar using 4 large screws.

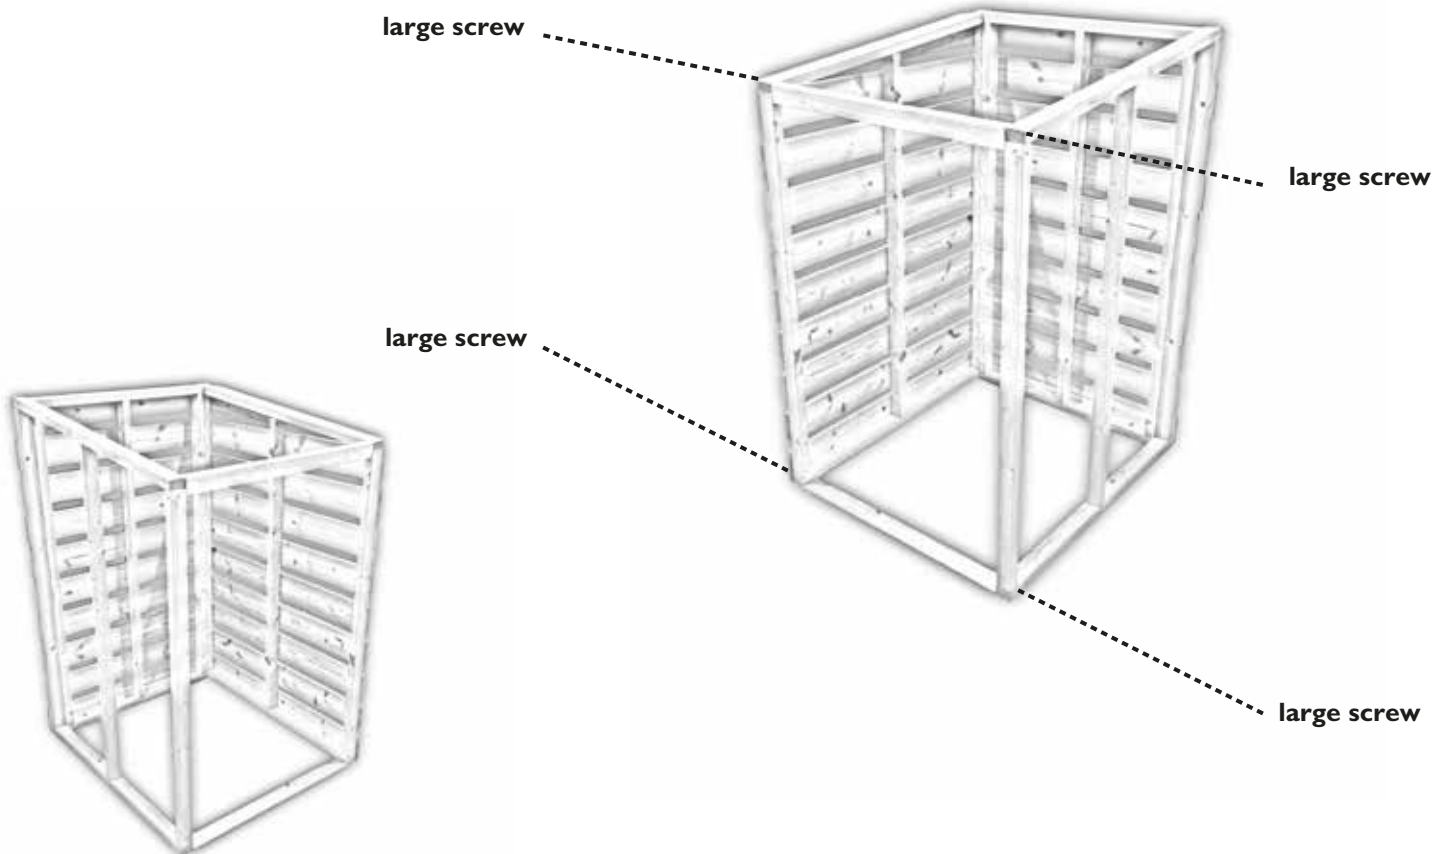

Repeat step 2 to make another side for the right side using the blank with pilot holes.

Step 3 :

Screw together the two frames with 6 medium screws through the pilot holes.



Step 4 :


Attach the lid with 6 small screws, line the lid up with the back of the bin store.



Repeat step 4 for other lid.

Step 5 :


Attach door to right side frame inside with 6 small screws. Align hinge with front edge and door into opening leaving equal gap top and bottom.

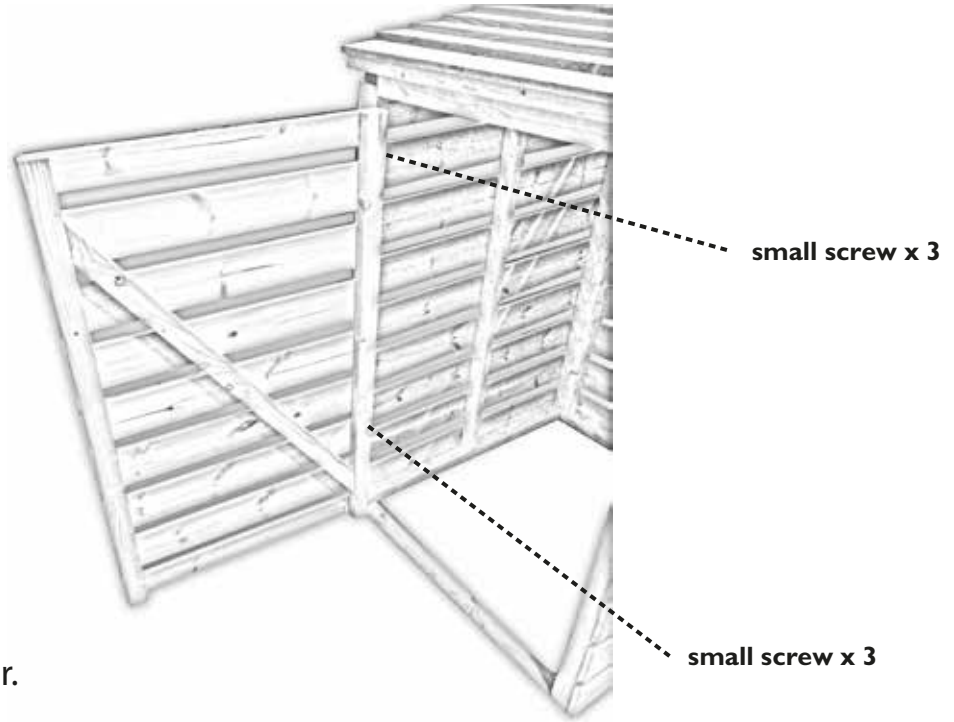

Repeat step 5 for other door.

Step 6 :


Attach the chain to the inside of the lid with a small screw.

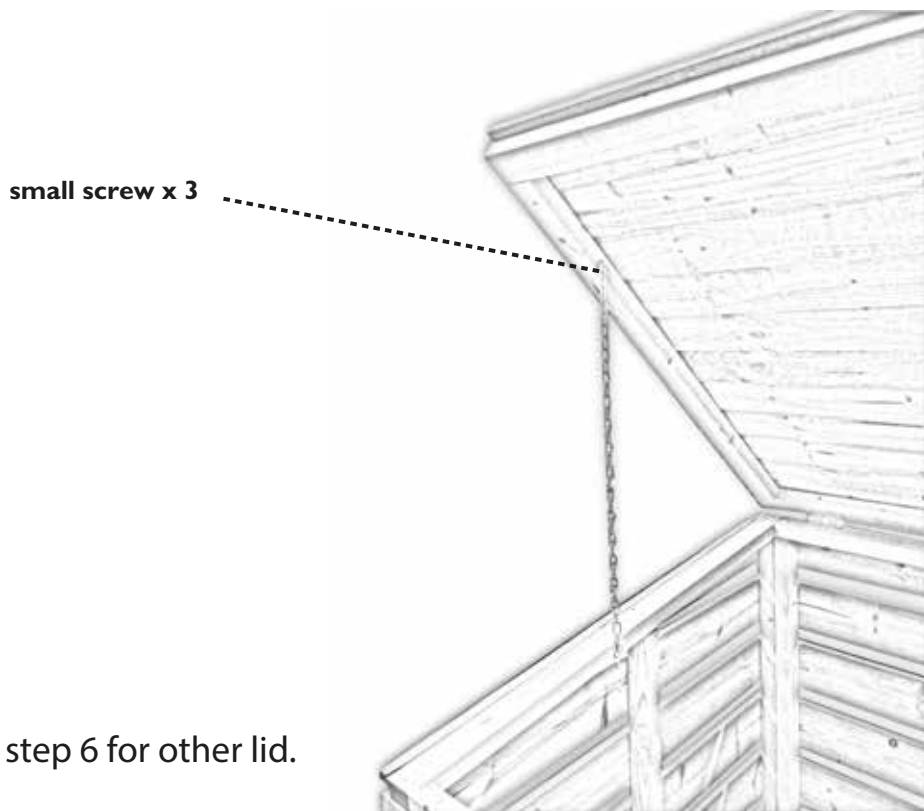

Repeat step 6 for other lid.

Step 7 :

Attach the padbolt to the door with small screws and the catch to the frame also with small screws.

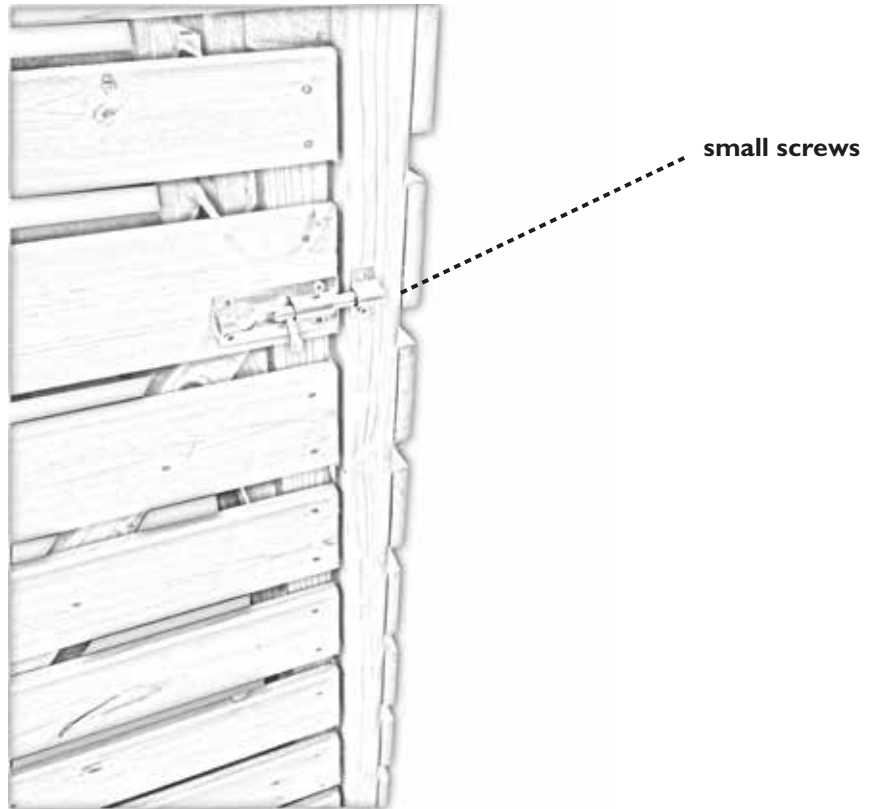

Repeat step 7 for other door.

Your bin store is complete, use the chain to attach to the bin lid handle so the bin lid lifts with the bin store lid.

