

TRIPLE WHEELIE BIN STORE ASSEMBLY INSTRUCTIONS



2 PERSON ASSEMBLY

CONTENTS

SCREWS

LARGE X 18
MEDIUM X 30
SMALL X 57

DOOR X 3



LID X 3




SIDE 1 X LEFT 1 X RIGHT



BACK X 3



BLANK X 4

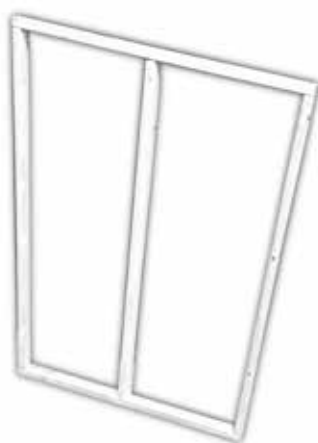

PADBOLT X 3



BASE BAR X 3




TOP BAR X 3




Step 1 :

Attach left side to the back from the inside with 3 medium screws.

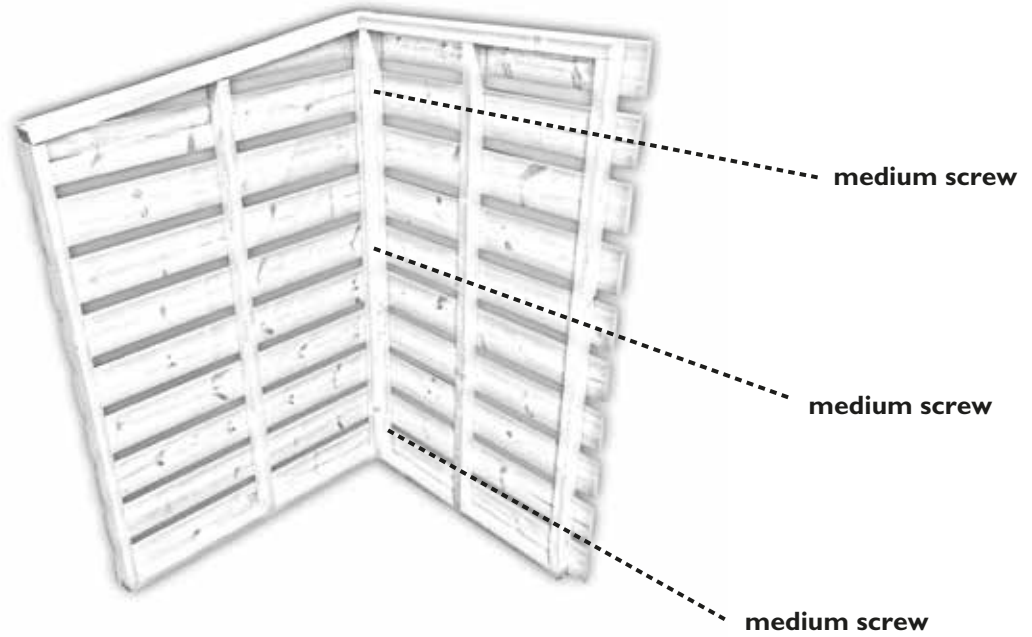

Step 2 :


Attach the blank with pilot holes to the left to the back using 3 medium screws and the top and bottom bar using 4 large screws.

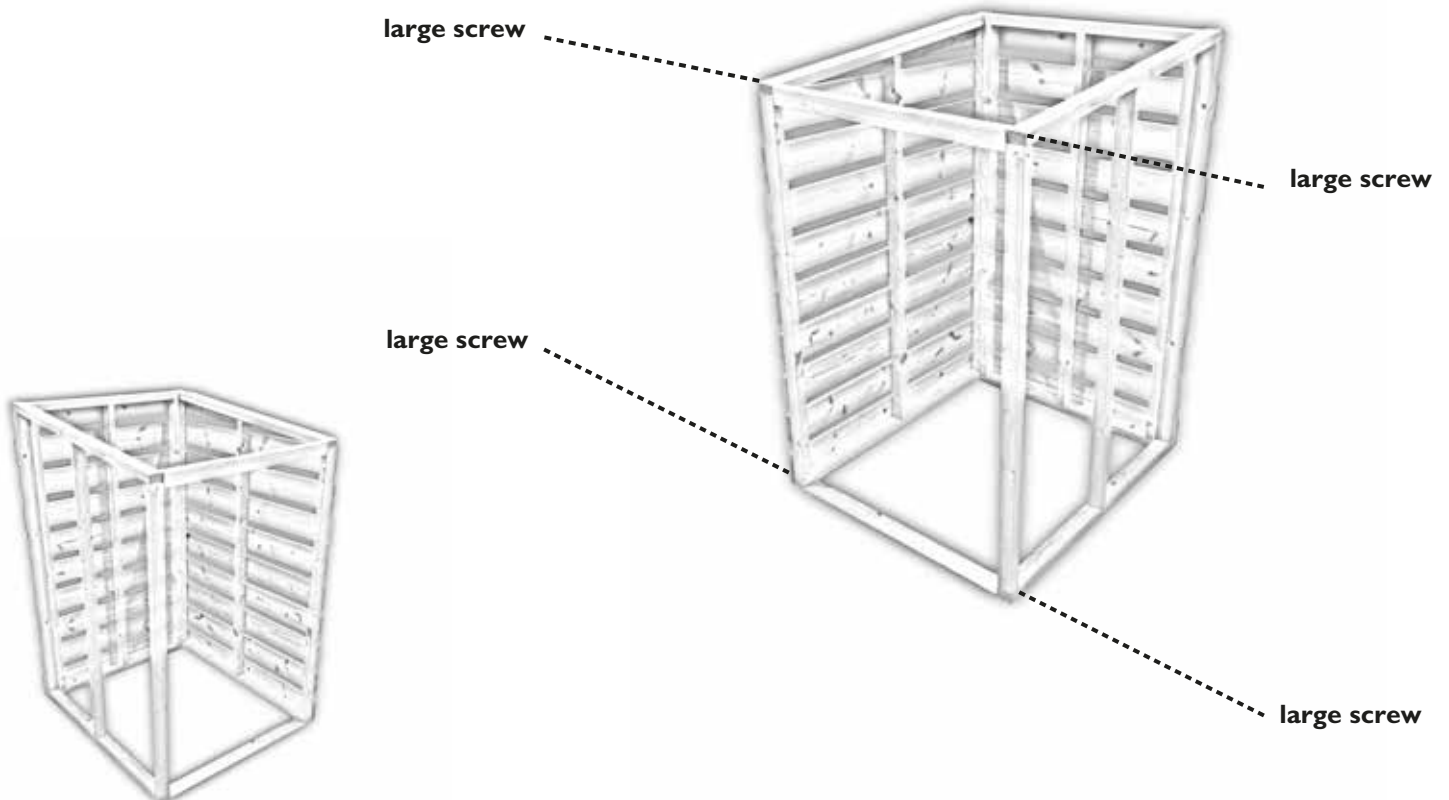

Repeat step 2 to make another side for the right side using the blank with pilot holes to the right.

Step 3 :

Take a back and attach 2 blanks without pilot holes with medium screws from the inside, then attach the top and bottom bar using 4 large screws.

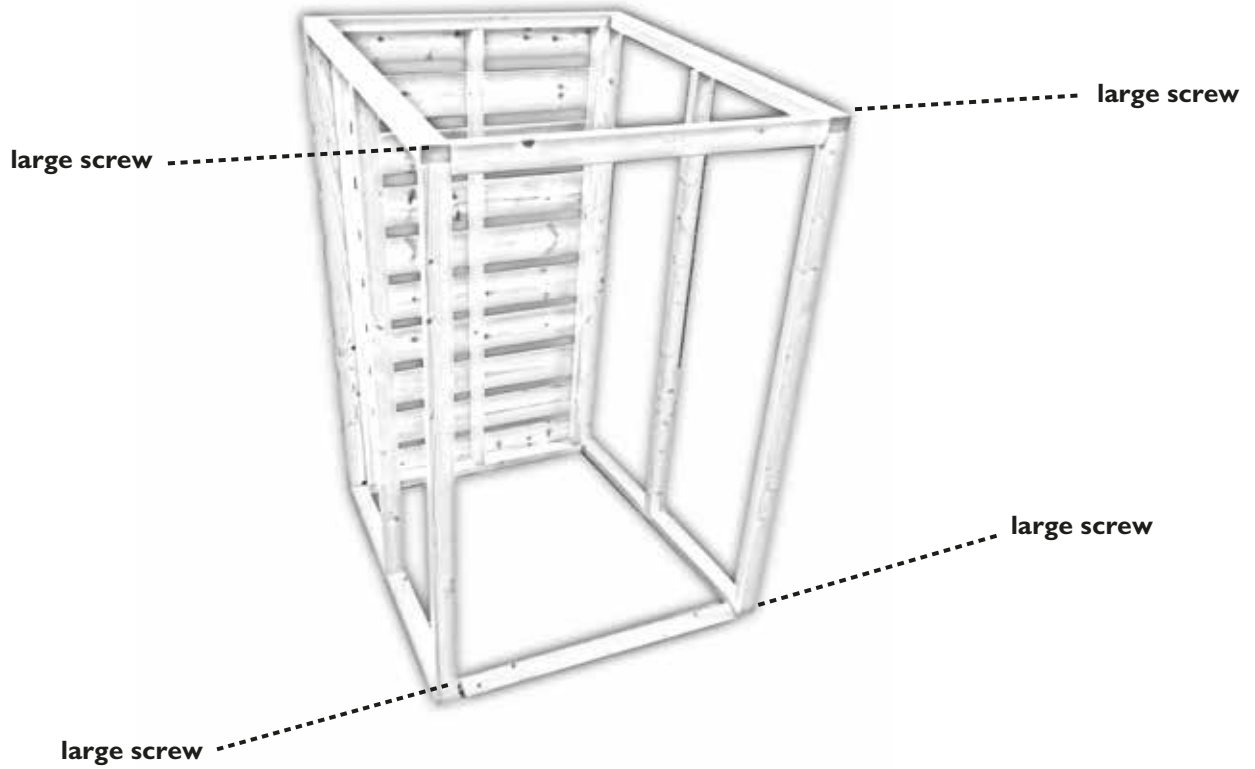

Step 4 :

Connect the ends to the centre with medium screws through the pilot holes.




Step 5 :

Attach the centre lid first (smaller in width) using 6 small screws. Then attach the other two lids in the same way.



Step 5 :

Attach door to left side frame inside with 6 small screws. Align hinge with front edge and door into opening leaving equal gap top and bottom.

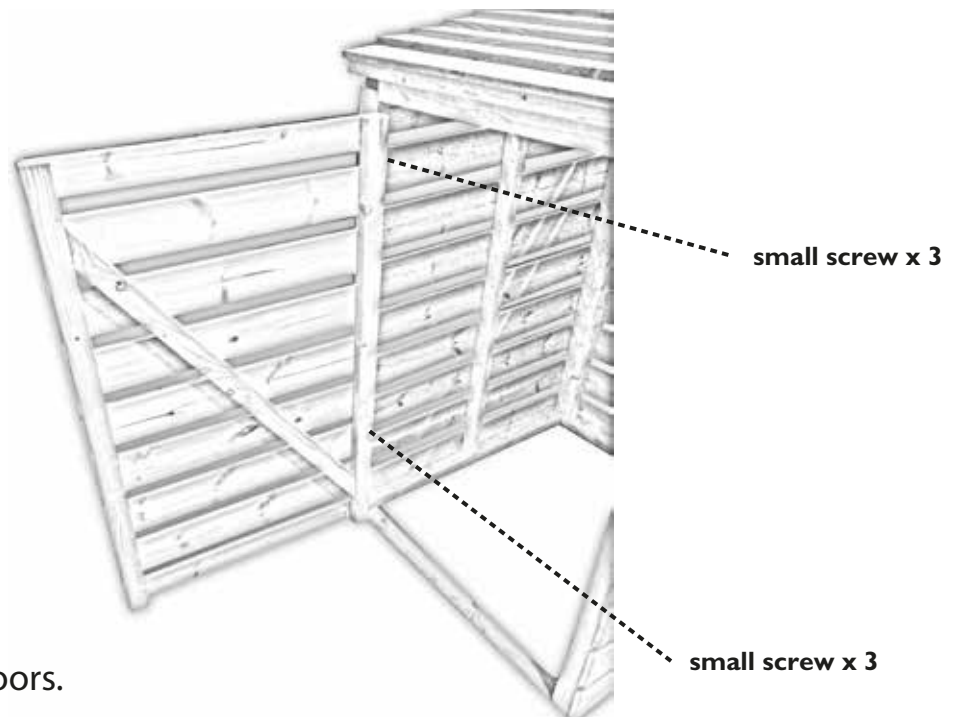


Repeat step 5 for other 2 doors.

Step 6 :

Attach the chain to the inside of the lid with a small screw. You can attach the chain through the bin lid to open it.

small screw x 3

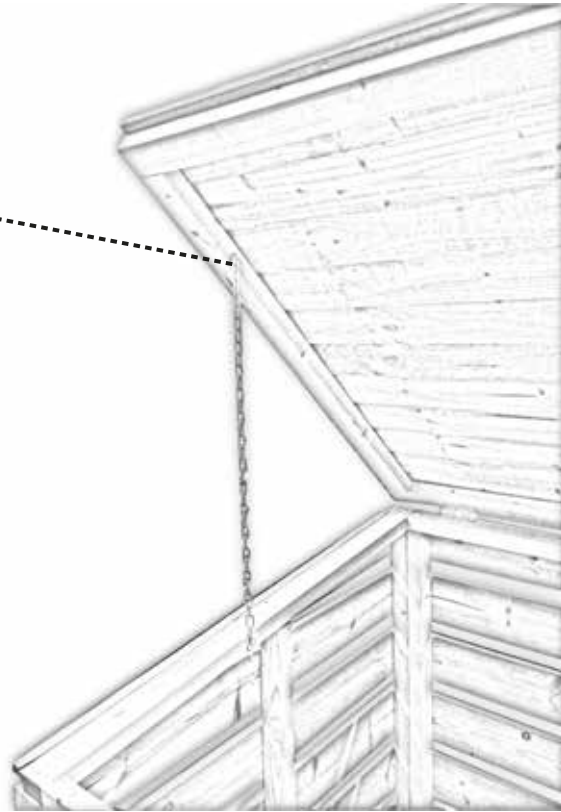


Repeat step 6 for other 2 lids.

Step 7 :

Attach the padbolt to the door with small screws and the catch to the frame also with small screws.

small screws

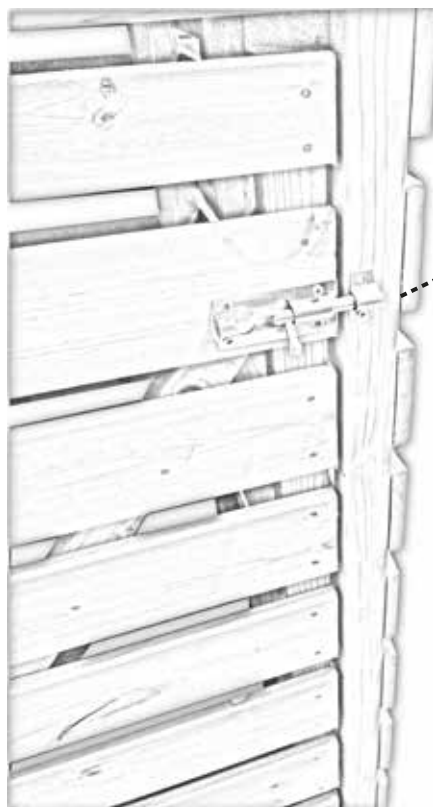

Repeat step 7 for other 2 doors.